

Micro Working Distance Camera

Model Name: INS-CHVS-934-10GM Series

Change History			
Rev.	Date	Author	Specification
V1.0	Nov. 2022	INSNEX	Original
V2.0	Jan. 2024	INSNEX	Addition of BA, AA1 models
V3.0	Feb. 2024	INSNEX	Optimised structure

Contact Us
<p>If you have any doubts or suggestions during the use of the software, please contact us promptly:</p> <p>Insnex Technologies Co.,Ltd</p> <p>Address: Building R, No. 218 Xingming Street, Suzhou Industrial Park, Suzhou Area, China (Jiangsu) Pilot Free Trade Zone</p> <p>Postal Code: 215000</p> <p>Website: http://www.insnex.com/</p> <p>Telephone: (86) 0512-67159489</p> <p>E-mail: Services@Insnex.com</p>

1. Product Outline


Item	INS-CHVS-934-10GM-BB	INS-CHVS-934-10GM-AA	INS-CHVS-934-10GM-BA	INS-CHVS-934-10GM-AA1	Note
Control Board	CIS-MAIN*2	CIS-MAIN*2	CIS-MAIN*3	CIS-MAIN*3	
Digital Data Output Interface	10GigE*2	10GigE*2	10GigE*3	10GigE*3	
Command transmission interface	Serial interface	Serial interface	Serial interface	Serial interface	
Scanning width	934	934	934	934	mm
Resolution	600	300	600	300	DPI
Effective pixel point	22086	11070	22086	11070	Pixels
Line frequency	66	110	95	150	kHz
Scanning speed	2.8	9.3	4	12.6	m/s
Data transfer rate	20	20	30	30	Gbps
Power supply	+24V×3A	+24V×3A	+24V×3A	+24V×3A	To control boards
	+24V×6A	+24V×6A	+24V×6A	+24V×6A	To LED boards
External Dimension	Figure 1	Figure 1	Figure 1	Figure 1	
Focus position(from glass surface)	15	15	15	15	mm
Image format	Mono8	Mono8	Mono8	Mono8	
Appearance Colour	Black	Black	Black	Black	

2. Operating Instructions




2.1 Focus Adjustment

- (1) Follow the text prompts. Turn the left knob counterclockwise to go down and clockwise to go up.

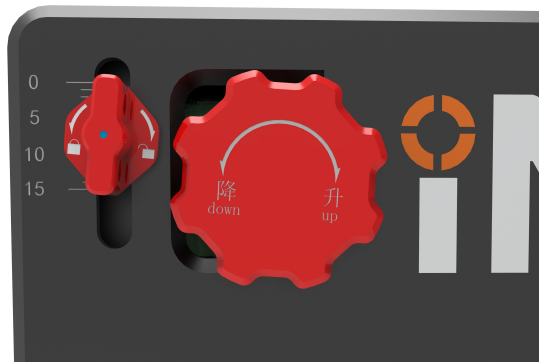


- (2) Follow the text prompts. Turn the right knob counterclockwise to go up and clockwise to go down.

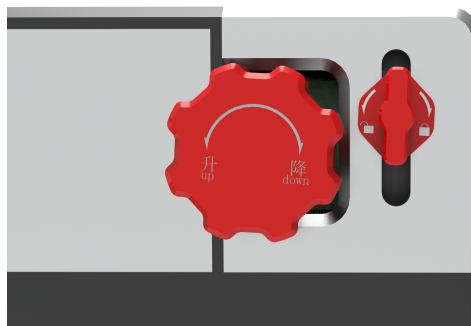


2.2 Locking Device


- (1) Rotate the left circular handle clockwise and tighten it to lock the focus adjustment device. There are prompts for locking and loosening the signs.
- (2) Rotate the right circular handle clockwise and tighten it to lock the focus adjustment device. There are prompts for locking and loosening the signs.
- (3) If there is a need for locking requirements, a long-handled tool can be used to reach into the small hole and extend the torque to lock or loosen.

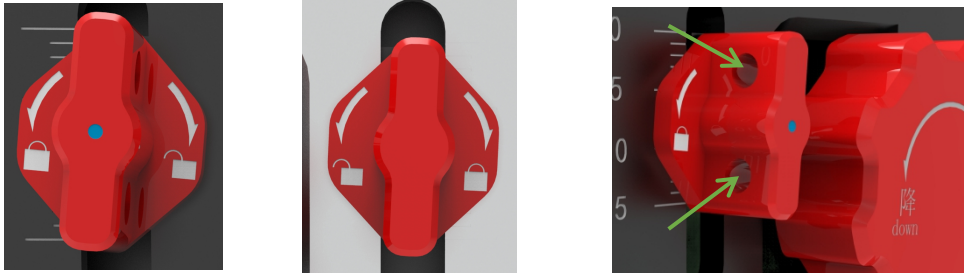


2.3 Adjustable Light Source Device

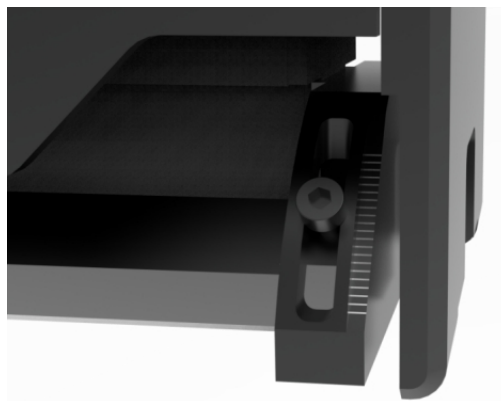

Adjust scale reference

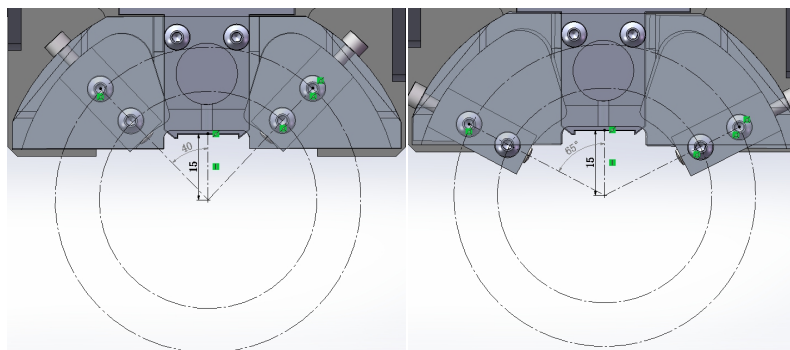


Focal length 15mm;
Single side adjustment of light source 40 ° - 65 °

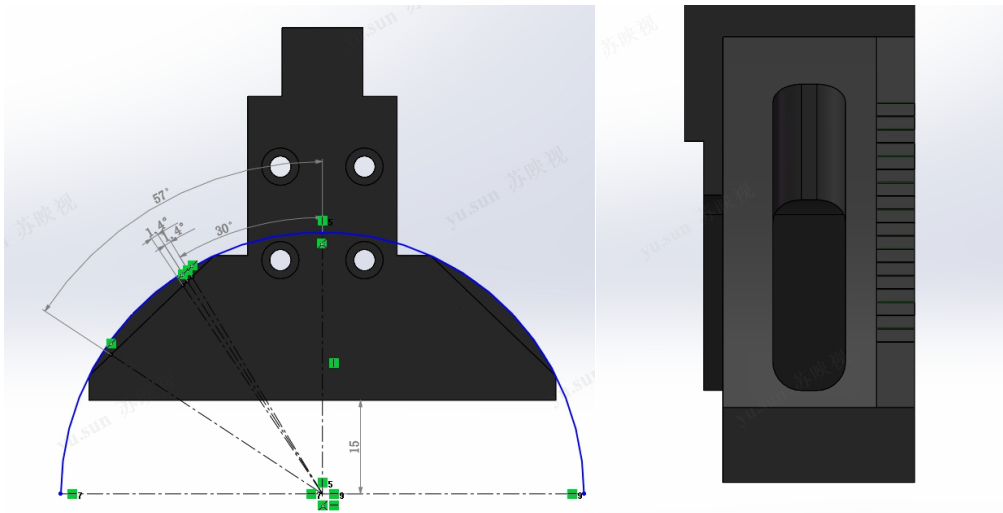


Light source adjustment scale line with a scale spacing of 1mm (1.4 °)

2.4 Light Source Cable Cover

After plugging in the front and rear light source power supply lines, cover the light source cover and tighten the corresponding screws to prevent loosening (symmetrical front and rear)

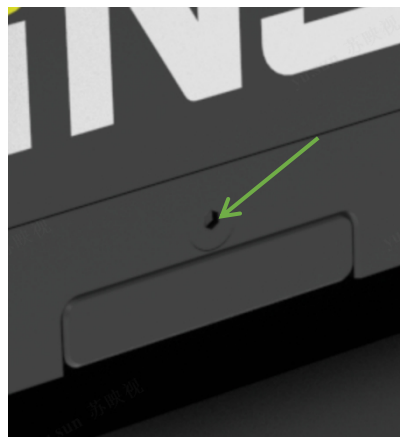


3. Description of Interface

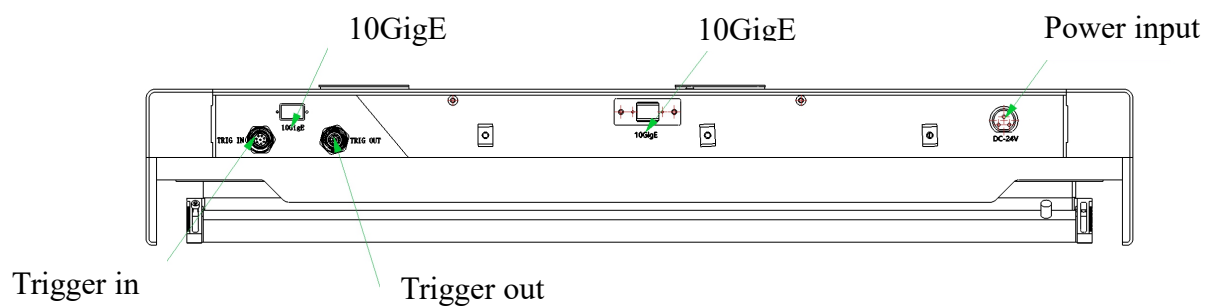


3.1 Trigger In

Pin	Name	I/O	Color	Description
1	A+	I	White	Shaft encoder phase A+
2	A-	I	Brown	Shaft encoder phase A-
3	B+	I	Green	Shaft encoder phase B+
4	B-	I	Yellow	Shaft encoder phase B-
5	I1+	I	Grey	External trigger input 1 +
6	I1-	I	Pink	External trigger input 1 -
7	I2+	I	Blue	External trigger input 2 +
8	I2-	I	Red	External trigger input 2 -

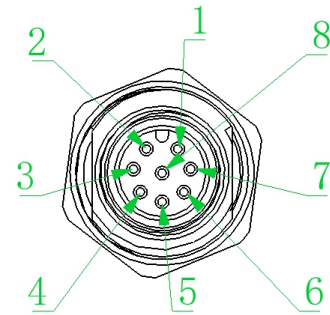

3.2 Trigger Out

Pin	Name	I/O	Color	Description
1	O1+	O	White	External trigger output 1 +
2	O1-	O	Brown	External trigger output 1 -
3	O2+	O	Green	External trigger output 2 +
4	O2-	O	Yellow	External trigger output 2 -
5	O3+	O	Grey	External trigger output 3 +
6	O3-	O	Pink	External trigger output 3 -
7	O4+	O	Blue	External trigger output 4 +
8	O4-	O	Red	External trigger output 4 -

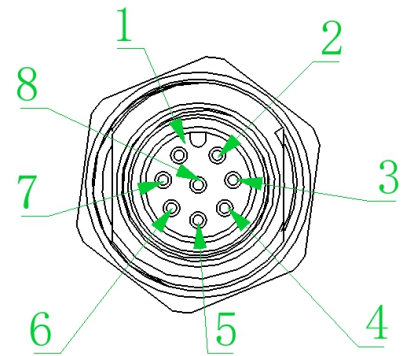


3.3 10GigE

Use 10GigE network to transmit commands and data. Please use Category 7 network cable.

3.4 Power Input

Pin	Signal	I/O	Color	Description
1	+24V_C	I	Brown	Control board DC 24V +
2	GND_C	I	Blue	Control board DC 24V-
3	+24V_L	I	Grey	Light source DC 24V +
4	GND_L	I	Yellow	Light source DC 24V -

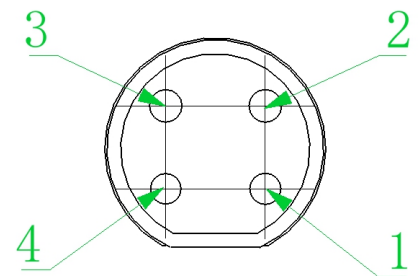

4. Serial Interface

This serial interface uses hex code.

Item	Value
Baud rate	115200
Start bit	1
Data bit	8
Parity bit	None
Stop bit	1
Flow control	None

5. Maximum Rating

Item	Symbol	Specification	Note
DC supply voltage	Control boards	+24V±1V	
	LED boards	+24V±1V	
Ambient temperature	Ta	0~+40°C	Operating
		-20~60°C	Storage
Ambient humidity		10%~90%RH	

6. Connector Plug/Unplug

Unplug & plug the cable number should be less than 50. The connector will be ineffective if it is extracted and inserted over that number.

7. Stable Operation

(1) The connector pins should not be touched by bare hands or electrostatic charge materials.

(2) Latch-up

When the supply voltage exceeds the absolute maximum, Latch-up will occur. Latch-up will cause the sensor to be broken, even if the voltage is caused by a surge. If the current varies rapidly in the external circuit, or when the power is switched on and off very frequently, ensure that the voltage of each terminal does not exceed the values indicated in below.

(3) Absolute maximum rating

Item	Specification		Unit
	Min.	Max.	
Control boards supply voltage	-0.3	+25.0	V
LED boards supply voltage	-0.3	+25.0	
Shaft encoder input voltage	-0.3	5.5	
External trigger input voltage	-0.3	25	
External trigger output voltage	-0.3	25	

8. Reliability

Please operate Micro Working Distance Camera under INS operating conditions, which is specified in section 5.

Figure 1. Dimensions

